
## SUGGESTED WIRING DIAGRAM

POLYGON TECHNOLOGIES | +27 (0)21 981 7062

EXAMPLE: CONNECTING AN 3 PIN 4-20 MA SENSOR TO THE GSM COMMANDER VIA THE ANALOG PORT

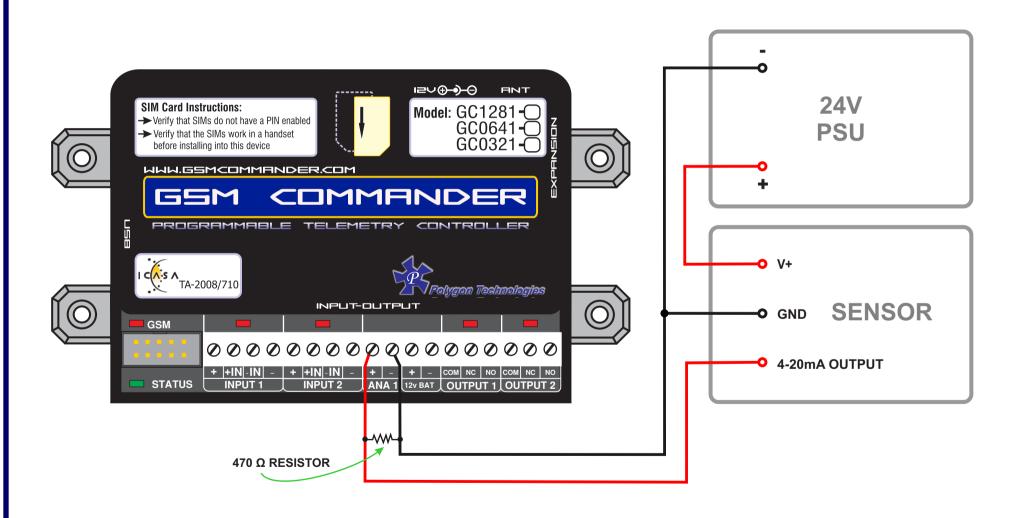

PLEASE NOTE: THIS IS A GUIDELINE ONLY. WE CANNOT BE HELD RESPONSIBLE FOR ANY DAMAGE OR LOSSES IN ANY WAY.



WWW.GSMCOMMANDER.COM